

WARNING

THIS NOZZLE IS NOT CONSIDERED TO BE EXPLOSION PROOF. USE IN AN EXPLOSIVE OR FLAMMABLE ENVIRONMENT MAY RESULT IN SEVERE INJURY OR DEATH.

ITEM	PART NO.	DESCRIPTION
1	CP1325-SS	Cap, Stainless Steel
2	SPARE PART KIT No. AB10000AUH-03-VI-KIT	O-Ring, Viton®
3		Seat Insert, Stainless Steel
4		O-Ring, Viton®
5		Plunger Sub-Asb., Type 18-FM & 302 St. Steel with Viton® Insert
6		Spring, Type 302 Stainless Steel
7		Cover Body, NPT Version, Type 18-FM Stainless Steel
		Cover Body, BSPT Version, Type 18-FM Stainless Steel
8	SPARE PART KIT No. AB10000-ELEC-VI-KIT	O-Ring, Viton®
9		O-Ring, Viton® (2 Required)
10		Coil, 24VDC, Glass-Filled PPS with NY Encapsulation
11		Electrical Connector, M8 – 3 Pole (Pico Size)
12		Socket Hd. Screw & O-Ring Sub-Asb., St. Steel &Viton (2 Required)
13		Inlet Body, 1/8 NPT, Type 18-FM Stainless Steel
		Inlet Body, 1/8 BSPT, Type 18-FM Stainless Steel
14	50699-5-LED-PVC	Cable Cordset, M8 – 3 Pole (Pico size), Straight Female, PVC

Notes:

If AA(B)10000AUH-03-EPR is ordered, replace all -VI with -EPR in part numbers

● Cable is available in Non-LED versions, with different lengths and in PUR material option.

Replacement springs can be ordered in packs of 10 with part number AB50691-SS-PKG

* Replacement M8 Electrical Connectors can be ordered in packs of 5 with part number AB50686-VI-PKG

Replacement Socket Head Screws can be ordered in packs of 20 with part number AB72417-1/2-SSVI-PKG

Wiring Instructions

1. From Cable Cordset (Item 14), connect the blue and brown wires to signal device. The black wire is not used, and can be cut back.
2. Connect the brown wire to +24V and blue wire to 0V from signal device outputs. If wired incorrectly, the LED indicator will not light properly.
3. Use of a high speed "fly back" diode may be required to help prevent reverse bias current feeding back to signal device.

Rebuild Instructions for Spare Part Kit AB10000AUH-03-VI-KIT


1. Remove Cap (Item 1), and UniJet Tip from Cover Body (Item 7).
2. Unscrew Seat Insert (Item 3) with O-rings (Items 2 and 4) from Cover Body, and allow Plunger (Item 5) and Spring (Item 6) to fall free.
3. Inspect and replace worn items.
4. Place both O-rings on Seat Insert, and slip Spring on Plunger.
5. Insert Plunger and Spring into Nozzle, and replace Seat Insert by screwing into Cover Body.
6. Replace UniJet Tip, and Cap.

Rebuild Instructions for Spare Part Kit AB10000-ELEC-VI-KIT

1. Remove two Screws (Item 12) from Inlet body (Item 13), and pull away from Cover body.
2. Disconnect Coil (Item 10) from Connector (Item 11), and unscrew Connector from Inlet body.
3. Replace O-rings (Items 8 & 9) in the Cover body and Coil.
4. Replace new Connector into Inlet body, then attach Coil to Connector.
5. Replace the Inlet body components into the Cover body, and use new Screws to assemble to the Cover body.

DESCRIPTION:

AA10000AUH-03
&
AAB10000AUH-03
PULSAJET® 10000
AUTOMATIC SPRAY
NOZZLE

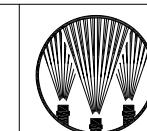

Spraying Systems Co.®
Spray Nozzles and Accessories
P.O. Box 7900 – Wheaton, IL 60187-7901
Rev. No. 11 MAINTENANCE INSTRUCTION NO.
Ref. ----- 10000AUH-03
SHEET -- OF -----