

THIS NOZZLE IS NOT CONSIDERED TO BE EXPLOSION

ENVIRONMENT MAY RESULT IN SEVERE INJURY OR DEATH.

PROOF. USE IN AN EXPLOSIVE OR FLAMMABLE

	ITEM	PART NO.	DESCRIPTION
Ī	1	CP1325-SS	Cap, Stainless Steel
	2	SPARE PART KIT No AB10000AUH-03-VI-KIT	O-Ring, Viton®
	3		Seat Insert, Stainless Steel
	4		O-Ring, Viton®
	5		Plunger Sub-Asb., Type 18-FM & 302 St. Steel with Viton®Insert
*[6		Spring, Type 302 Stainless Steel
	7		Cover Body, NPT Version, Type 18—FM Stainless Steel
			Cover Body, BSPT Version, Type 18—FM Stainless Steel
	8	- SPARE PART KIT No. - AB10000-ELEC-VI-KIT	O-Ring, Viton®
	9		O-Ring, Viton® (2 Required)
	10		Coil, 24VDC, Glass—Filled PPS with NY Encapsulation
* [11		Electrical Connector, M8 — 3 Pole (Pico Size)
*	12		Socket Hd. Screw & O-Ring Sub-Asb., St. Steel &Viton (2 Required)
	13		Inlet Body, 1/8 NPT, Type 18—FM Stainless Steel
			Inlet Body, 1/8 BSPT, Type 18—FM Stainless Steel
• [14	50699-5-PVC	Cable Cordset, M8 — 3 Pole (Pico size), Straight Female, PVC

Notes

If AA(B)10000AUH-03-EPR is ordered, replace all -VI with -EPR in part numbers

- 50699-5 Cable is available in Polyurethane (PUR) as an option.
- (Replacement springs can be ordered in packs of 10 with part number AB50691-SS-PKG
- * Replacement M8 Electrical Connectors can be ordered in packs of 5 with part number AB50686-VI-PKG Replacement Socket Head Screws can be ordered in packs of 20 with part number AB72417-1/2-SSVI-PKG

Wiring Instructions

- 1. From Cable Cordset (Item 14), connect the blue and brown wires to signal device. The black wire is not used, and can be cut back.
- 2. The two wires may be connected to either of the signal device's outputs. Polarity is not important.
- 3. Use of a high speed "fly back" diode may be required to help prevent reverse bias current feeding back to signal device.

Rebuild Instructions for Spare Part Kit AB10000AUH-03-VI-KIT

- 1. Remove Cap (Item 1), and UniJet Tip from Cover Body (Item 7).
- 2. Unscrew Seat Insert (Item 3) with 0-rings (Items 2 and 4) from Cover Body, and allow Plunger (Item 5) and Spring (Item 6) to fall free.
- 3. Inspect and replace worn items.
- 4. Place both O-rings on Seat Insert, and slip Spring on Plunger.
- 5. Insert Plunger and Spring into Nozzle, and replace Seat Insert by screwing into Cover Body.
- 6. Replace UniJet Tip, and Cap.

Rebuild Instructions for Spare Part Kit AB10000-ELEC-VI-KIT

- 1. Remove two Screws (Item 12) from Inlet body (Item 13), and pull away from Cover body.
- 2. Disconnect Coil (Item 10) from Connector (Item 11), and unscrew Connector from Inlet body.
- 3. Replace O-rings (Items 8 & 9) in the Cover body and Coil.
- 4. Replace new Connector into Inlet body, then attach Coil to Connector.
- 5. Replace the Inlet body components into the Cover body, and use new Screws to assemble to the Cover body.

DESCRIPTION:

AA10000AUH-03 & AAB10000AUH-03 PULSAJET® 10000 AUTOMATIC SPRAY NOZZLE



Spraying Systems Co.

Spray Nozzles and Accessories P.O. Box 7900 - Wheaton, II. 60187-7901

Rev. No. ₁₀

Ref. ----

MAINTENANCE INSTRUCTION NO. 10000 AUH-03

SHEET ---- OF ----